



unIFY Control Panel


Clockaudio CDT100 Configuration



QSC, LLC • 1675 MacArthur Boulevard • Costa Mesa, CA 92626
Ph: 800/854-4079 or 714/957-7100 • Fax: 714/754-6174

© 2020 QSC, LLC all rights reserved. QSC and the QSC logo are registered trademarks of QSC, LLC in the U.S. Patent and Trademark office and other countries. All other trademarks are the property of their respective owners. Patents may apply or be pending.

www.qsc.com

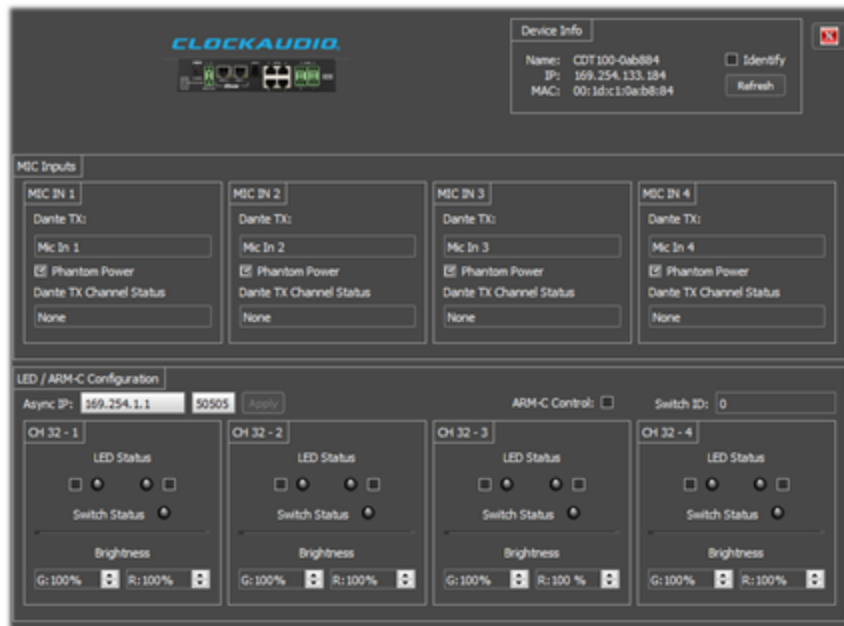

The configuration software for the Clockaudio CDT-100 is organized into the following key sections:

- MIC Inputs
- LED / ARM-C Configuration

**Note: Any changes made to device settings will only persist until power is cycled on the device. To retain the settings, they must be stored to Preset 0 using the "Save Presets" feature within unIFY Control Panel.*

MIC Inputs



Dante™ TX Channel Name

This text field reports the Dante™ transmit channel name shown on the Dante™ network for corresponding analog input channel.

**Note: This field is non-editable. To edit the channel names, use the device list view control or use Dante™ Controller.*

Phantom Power Control


The phantom power control section allows the user to adjust the phantom power state for the corresponding inputs.

Dante™ TX Channel Status

This text field reports the number of active Dante™ receive devices for the corresponding transmitter channel. If no devices are subscribed to the transmitter channel the text field will report “None”.

**Note: This field is non-editable. To edit the channel names, use the device list view control or use Dante™ Controller.*

LED/ARM-C Configuration

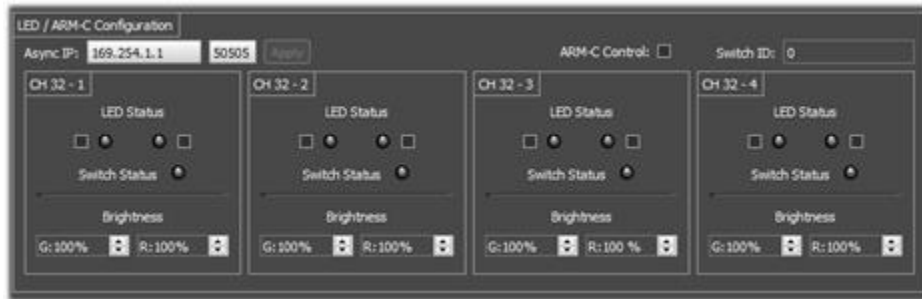

Asynchronous IP Address and Port

Logic input state changes can be asynchronously transmitted over the network. The asynchronous IP and port set the location these messages are sent to. Asynchronous messages can be switched off by sending the IP address of 0.0.0.0.

ARM-C / Switch ID Controls

The ARM-C control allows the user to manually activate/deactivate the ARM-C output. Simply check the box to activate the output or un-check the box to de-activate the output. The “Switch ID” field indicates the current setting of the address switch on the front of the unit. This field is not editable by the application and is for monitoring purposes only.

CH32 Controls

A green and a red indicator show the state of the state of the LED’s on each channels CH32. The state of every LED can be manually set from the application by clicking on the checkbox next to the appropriate LED.

**Note: The state of the status indicators is taken from the connected device in real time so when the state is changed, either manually or by a 3rd party system, there may be a short delay before the application status catches up.*

The switch status shows the state of the CH-32 switch and whether it is active or not.

**Note: There may be a short delay between the state of the input changing and the application displaying the new state.*



Attero Tech by QSC unIFY Control Panel Clockaudio CDT100 Configuration

The brightness fields can be used to alter the brightness of the CH-32's LED's. Brightness can be adjusted in 10% increments from 10% up to 100%. There are separate controls for both the green and red LED's on each channel.